



Turn the wireless ON in your modem


1. Open your web browser and key 192.168.1.254 into the address bar

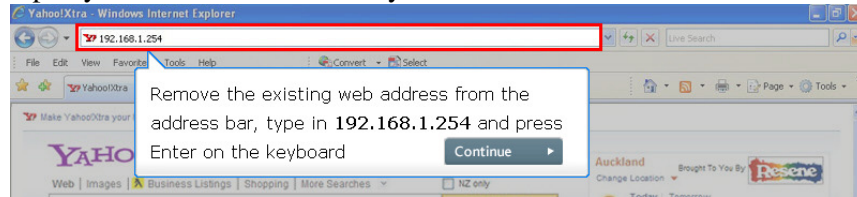


2. On the left panel, select **Home Network**

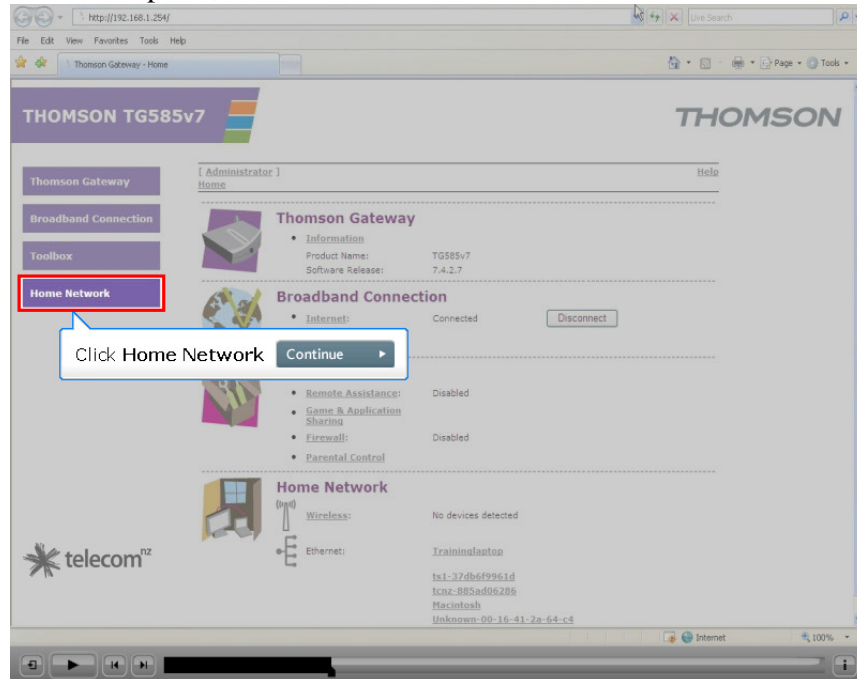


3. Select **WLAN** under the wireless section

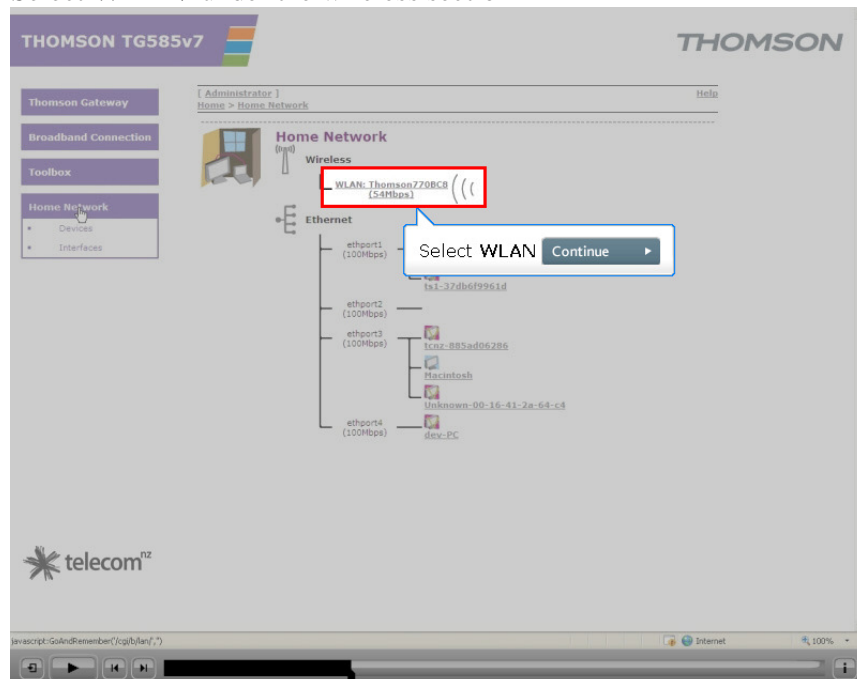


4. Select **Configure** at the top right hand side of the screen

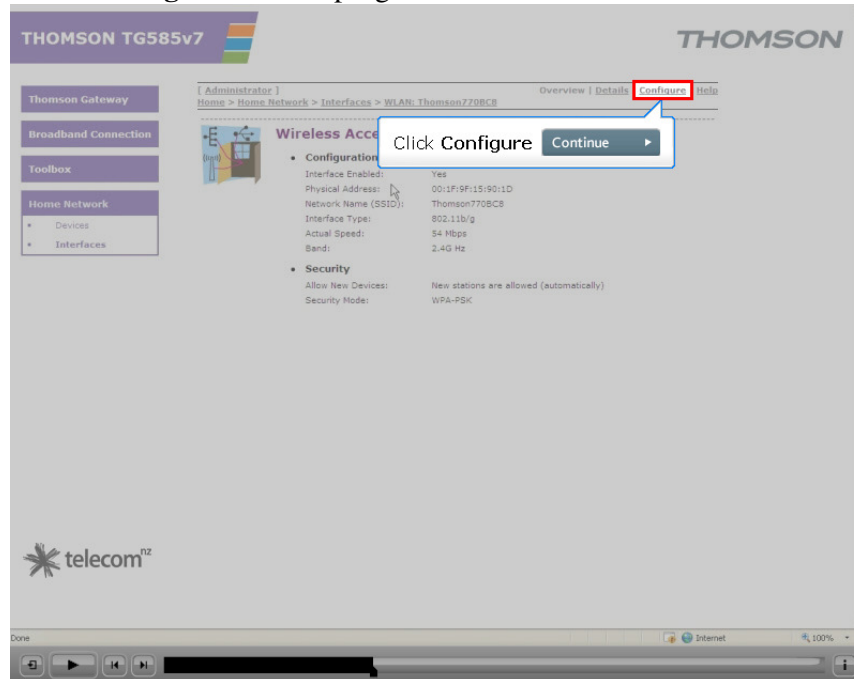

5. Check the box **Interface Enable**

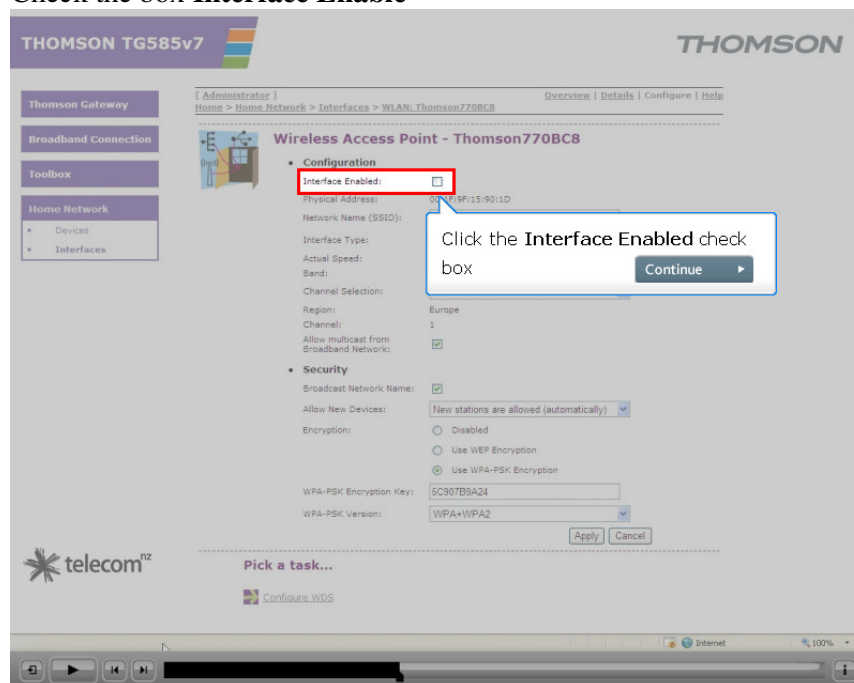

6. You have the option now to change the **Network Name (SSID)**: from ThomsonXXX to make it easier for you to recognise your modem when connecting your computer (e.g. Joe Smith's Wireless). The same applies to the **WPA-PSK Encryption Key**: (password). You do not have to change either of these, this is optional.
7. Select **Apply**

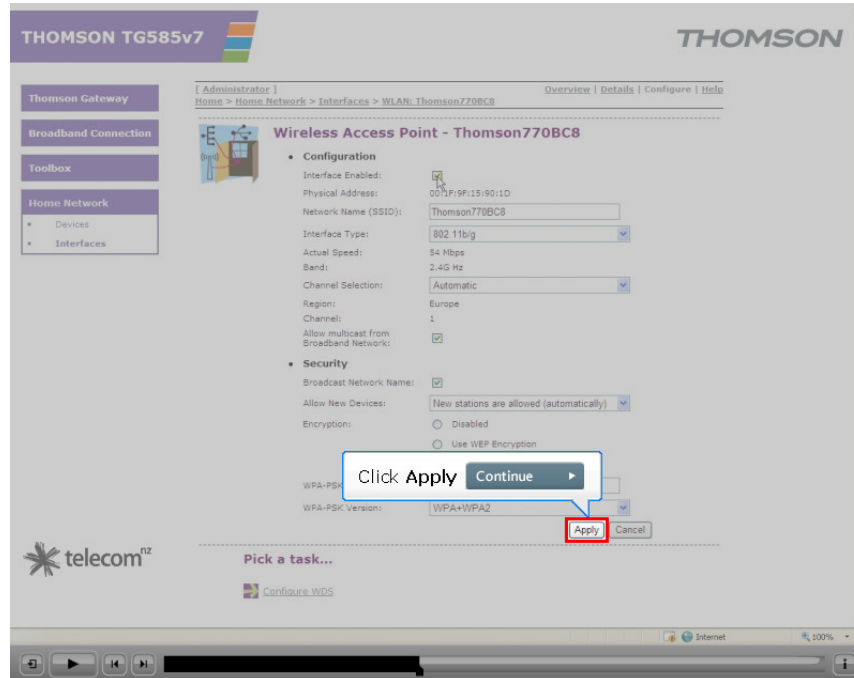

8. Close the window.
9. Proceed with your operating system instructions.